



# Spoiler paramani BMW R 1200 RT (cod. SP 7802 - SP 7803)

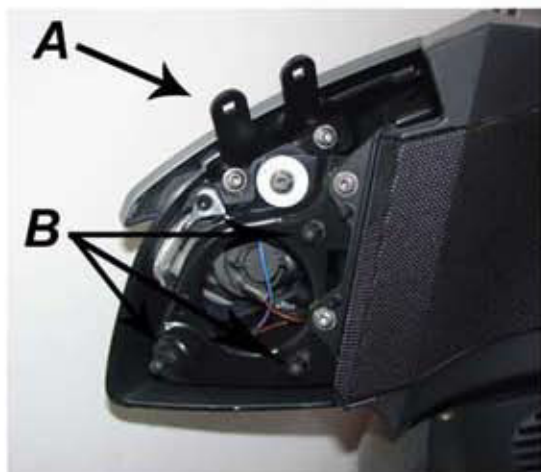

Remove the mirror and the mirror housing.  
To do so, simply pull it back.  
Install the bracket (figure A) using the original screws.

Remove the original plastic mirror attachment.  
We recommend to use a ring spanner (size 10)  
in order to avoid a damage to the hexagon.

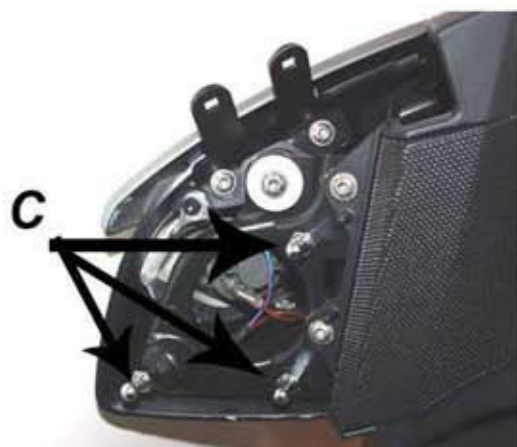

Now install the bracket (figure C) using the delivered  
M6 screws.

It's recommended to fit the bracket using a drop of  
screw glue (loctide).



Insert the rubber grommets to the wind deflector and  
install the handguard to the vehicle using the delivered  
carriage bolts and the special nuts.

Attach the rubber lip as shown in figure D. The thin  
part of the lip shows to the inside.

Re-install the mirror and mirror housing to the  
vehicle.

Double check your work before riding.

